



GATE PEDESTAL GUIDE:

- A** Fast Pass Card Reader
- B** Magnetic Stripe Reader
- C** Assistance Call Button
- D** Camera
- E** Display Screen
- F** Intercom Speaker
- G** Gate Pass Dispenser
- H** Card Imager
- I** Sticker/Label Dispenser
- J** Bar Code Reader (*outbound*)
- K** Biometric Card Reader (*future*)
- L** Alpha Numeric Keyboard

- Improved facility security
- Self-service pedestals
- Call button to request assistance
- More efficient terminal access
- Enhanced information exchange
- Multilingual display options

RESTRICTED ACCESS AREAS:

- Upon entering this Port of Miami Restricted Access Area, you are subject to a search of your person, vehicle, and any container in your possession.
- Government issued photo identification is required at all times.
- Possessing a firearm or any other weapon is strictly prohibited. Offenders are subject to arrest and penalty of one year in jail and fine.

SEAPORT SECURITY OPERATIONS

305-347-4800

MIAMI-DADE POLICE

305-476-5423

MIAMI-DADE FIRE RESCUE

305-513-7939

Automated Security Gate System
 questions please call Port of Miami
 Technology Help Desk at
305-347-4845.



Port of Miami Automated Security Gate System



INBOUND LANES

GETTING STARTED:

When approaching a truck gate pedestal, leave enough space to open the truck door.



POM Port ID

- (1) Swipe Port ID in front of Fast Pass Card Reader **A**. If Fast Pass Card Reader does not instantly recognize your Port ID, then insert and swipe your card in the Magnetic Stripe Reader **B**.
- (2) If applicable, select company name **L**.
- (3) Select marine cargo terminal **L**.
- (4) Choose Scale & Payment option **L**.
- (5) Retrieve Gate Pass **G** and proceed to designated cargo terminal.

POM One Day Card

- (1) Insert and swipe POM One Day Card in Magnetic Stripe Reader **B**.
- (2) If applicable, select company name **L**.
- (3) Select marine cargo terminal **L**.
- (4) Choose Scale & Payment option **L**.
- (5) Retrieve Gate Pass **G** and proceed to designated cargo terminal.

INBOUND LANES 1 - 10

LANE NUMBER 1 *Manned Gate*
Passenger Vehicles

LANE NUMBER 2 - 3 *Manned Gate*
Trucks or Passenger Vehicles
Truck Scale / All Payment Options

LANE NUMBER 4 - 10 *Automated Gate*
Trucks
Truck Scale / Pre-Paid Accounts



OUTBOUND LANES

GETTING STARTED:

Place Gate Pass under Bar Code Reader **J**.

If Bar Code Reader does not instantly recognize Gate Pass information, then:

- (1) Swipe **POM Port ID** in front of Fast Pass Card Reader **A**, or
- (2) Insert and swipe **POM One Day Card** in Magnetic Stripe Reader **B**.

OUTBOUND LANES 1 - 6

LANE NUMBER 1 *Manned Gate*
Passenger Vehicles

LANE NUMBER 2 *Manned Gate*
Trucks or Passenger Vehicles

LANE NUMBER 3 - 6 *Automated Gate*
Trucks



**SPEED
LIMIT
10**