

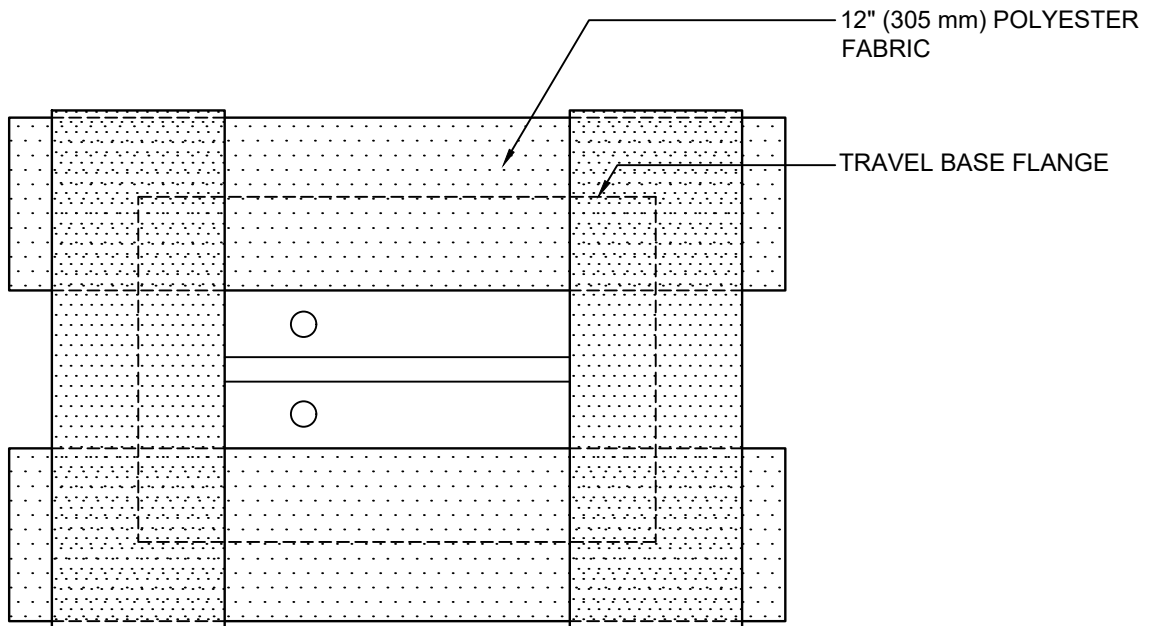


3 COURSE FLASHING

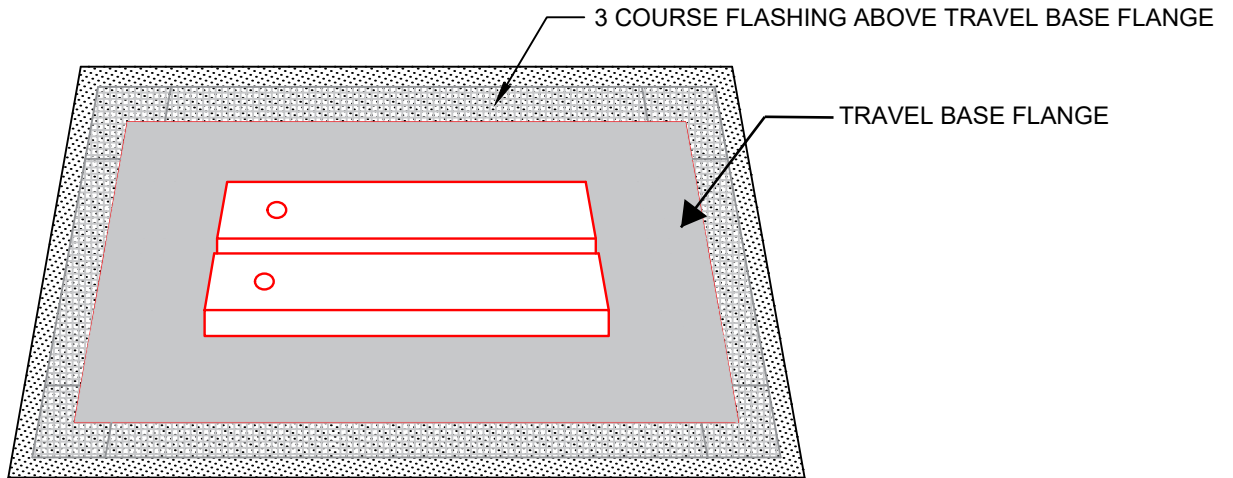

NOTE:


1. APPLY ROOF SEALANT TO BOTTOM OF PENETRATION FLANGE AND DIRECT TO ROOF DECK.
2. 3 COURSE FLASHING UTILIZING ROOF SEALANT AND 12" POLYESTER FABRIC AND ALLOW TO DRY.
3. MINIMUM SLOPE REQUIRED 2:12 OR GREATER.
4. POST NOT ILLUSTRATED.

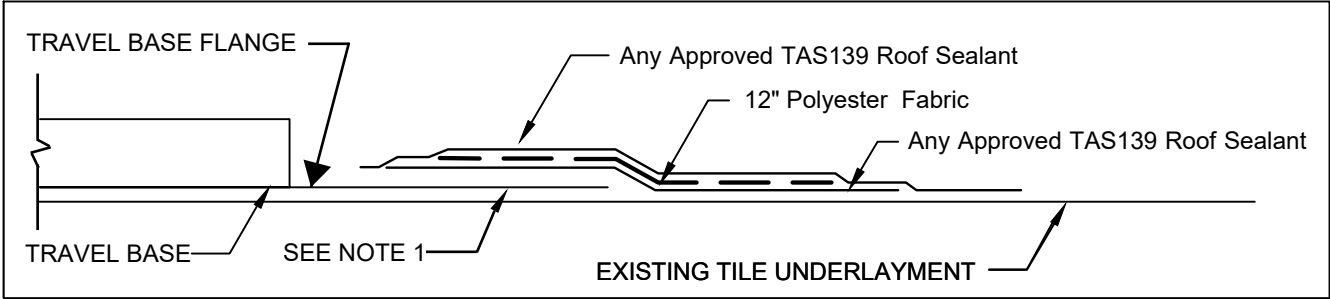

PV STANDOFF - TRAVEL BASE FLASHING DETAIL FOR TILE ROOF

SCALE	PROCESS NUMBER
N.T.S.	

3 COURSE FLASHING

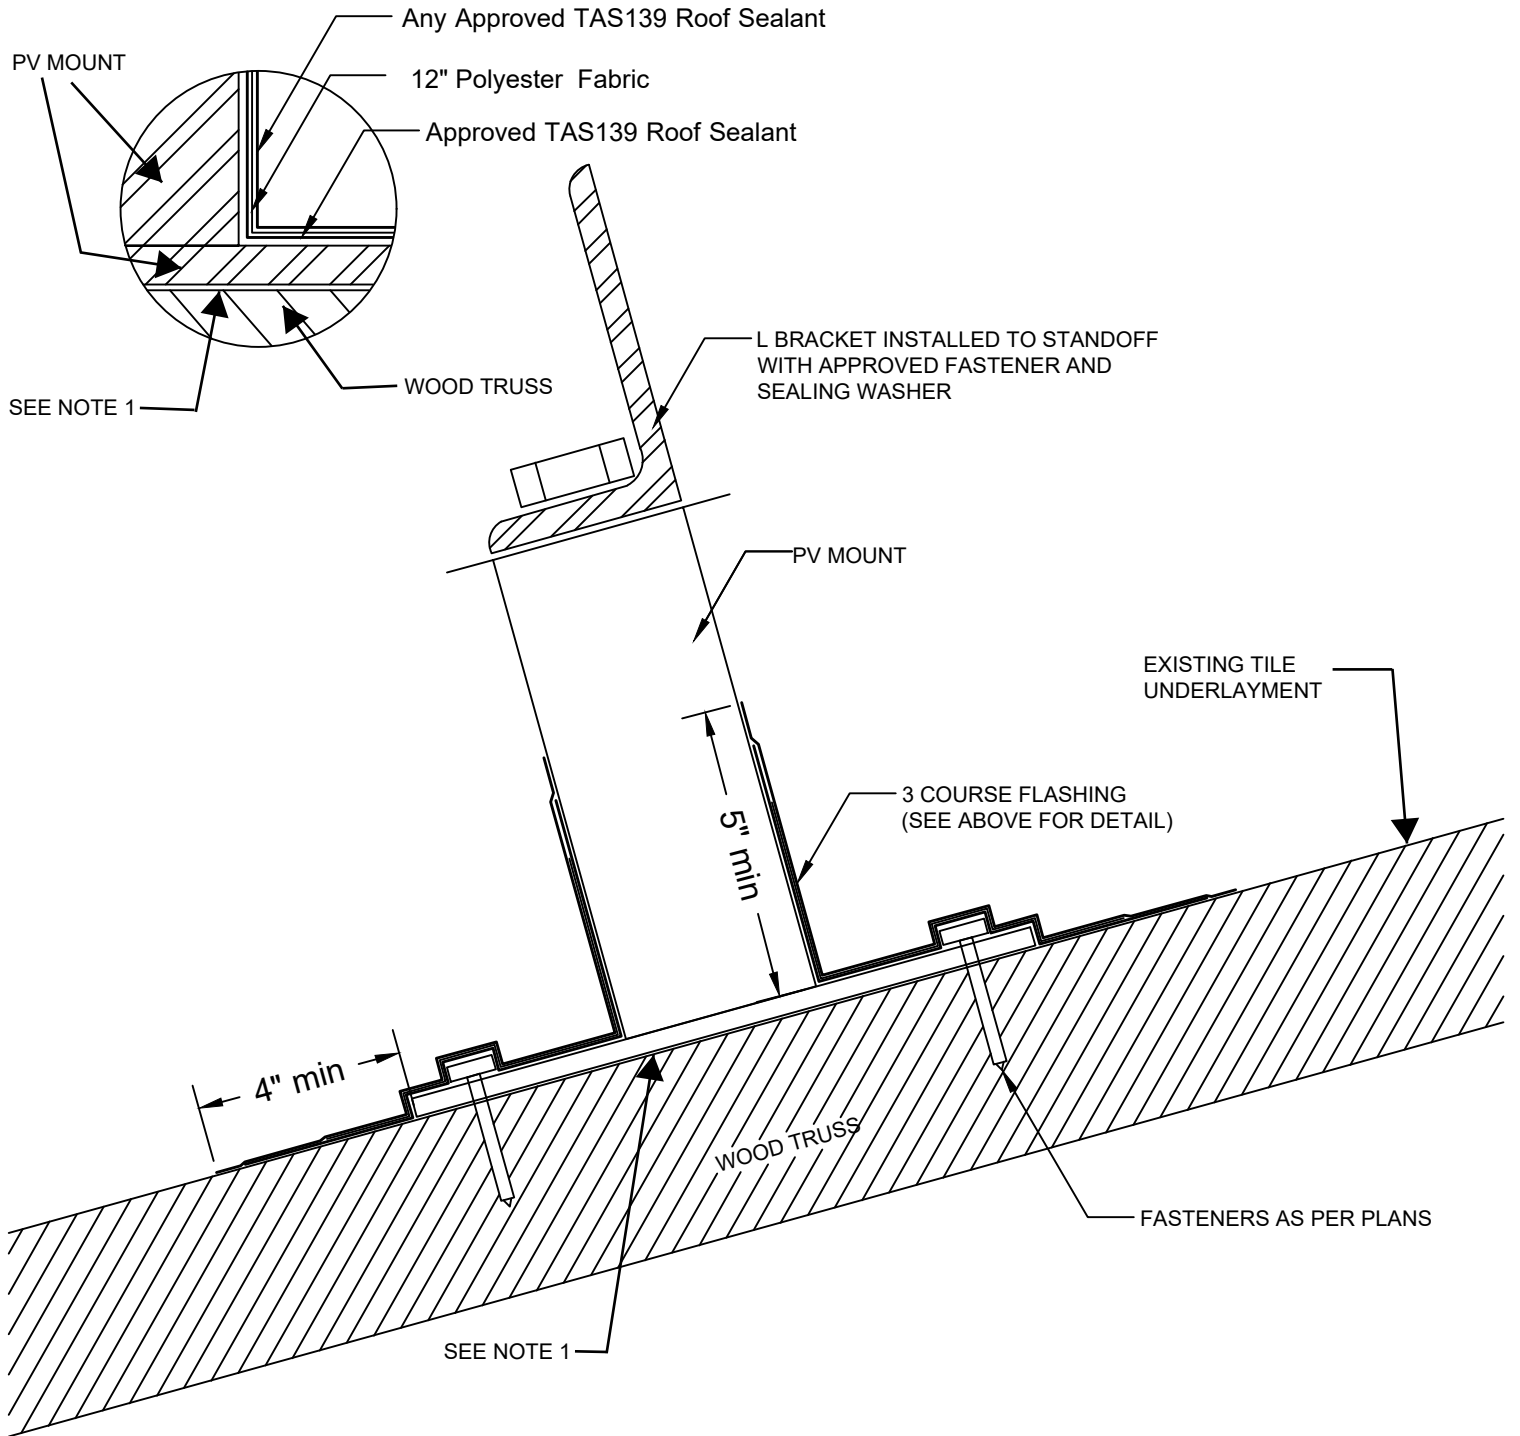

NOTE:

1. APPLY ROOF SEALANT TO BOTTOM OF PENETRATION FLANGE AND DIRECT TO ROOF DECK.
2. 3 COURSE FLASHING UTILIZING ROOF SEALANT AND 12" POLYETSER FABRIC AND ALLOW TO DRY.
3. MINIMUM SOPE REQUIRED 2:12 OR GREATER



PV MOUNT DETAIL - TILE ROOF

SCALE	Process Number
N.T.S.	